



# DAGR Interface Training

This Brief is Classified UNCLASSIFIED//FOR OFFICIAL USE ONLY



# DAGR Internal Setup – Step 1

C4ISR – SPAWAR - AUSGAR




-Select the Operating Mode as “CONTINUOUS” from the main Menu key



# DAGR Internal Setup – Step 2

C4ISR – SPAWAR - AUSGAR

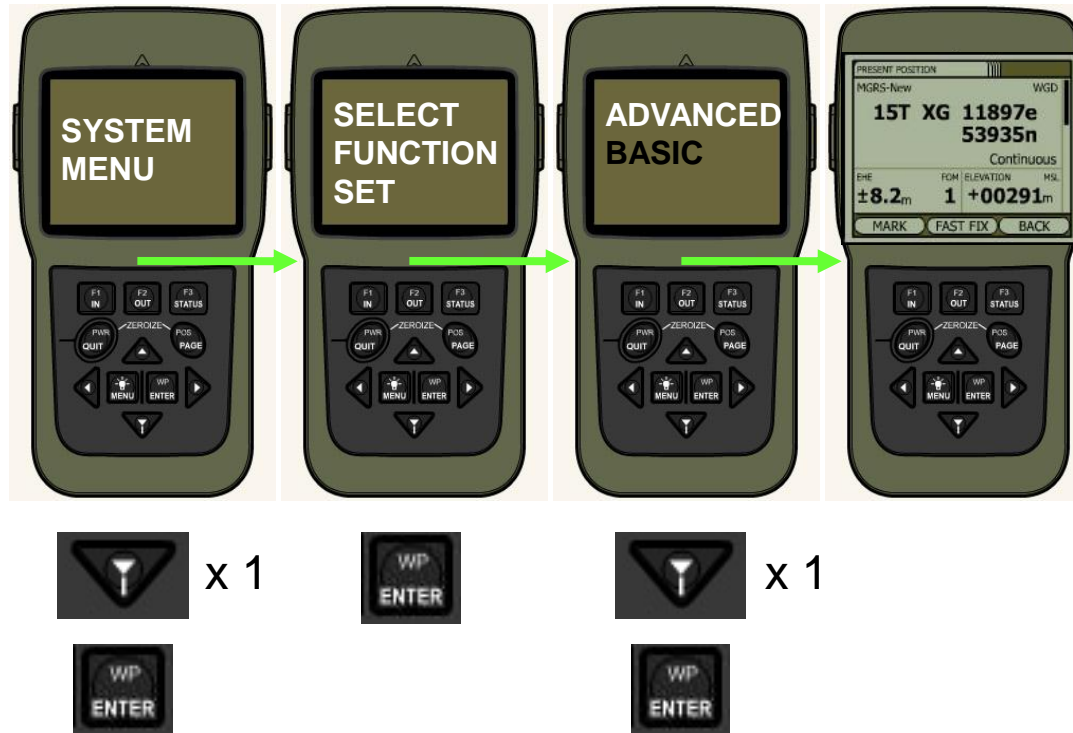

-Change the Function Set in the DAGR to “ADVANCED” under the System Menu as shown above



# DAGR to PLRF-15C Setup

C4ISR - SPAWAR - AUSGAR



Connect the J2 Data Interface Connector on the DAGR to the RS170 interface plug on the PLRF-15C utilizing the adaptor cable with integrated trigger.



x6 to Interface



PC or PLGr  
Scroll to PLGr



x6 to STOr



x2 seconds



# Fixing Target Position with PLRF15C

C4ISR - SPAWAR - AUSGAR



x 1



## TARGET LOCATION

PRESENT POSITION			
MGRS-New		WGD	
<b>15T XG</b>	<b>13470</b>	<b>e</b>	
	<b>53935</b>	<b>n</b>	
Continuous			
EHE	FOM	ELEVATION	MSL
<b>±8.2</b>	<b>1</b>	<b>+00291</b>	<b>m</b>
MARK		FAST FIX	
		BACK	

-Actuate the Distance Key x1 OR the trigger on the interface cable x1 and the target's position will appear on the DAGR screen.





# DAGR / LRTV Interface

C4ISR - SPAWAR - AUSGAR



x2 seconds

- Connect the DAGR J2 port to the LRTV utilizing the adaptor cable provided in the LRTV kit
- Power on the DAGR and set to "CONTINUOUS" and "ADVANCED" (see previous slides)
- Firing the laser range finder on the LRTV will display the target location on the DAGR screen





# Equipment Repairs

C4ISR - SPAWAR - AUSGAR

- IF ANY ITEM IN YOUR KIT BECOMES INOPERABLE, PLEASE CONTACT THE FOLLOWING BY E-MAIL OR PHONE:
- ***SSC Pacific C4I Help Desk - 24/7/365***  
***ssc\_pac\_c4isrhd@navy.mil***  
***(619/DSN) 524-3888***
- IF ANY ITEM IN YOUR KIT BREAKS OR BECOMES DAMAGED (FOR ANY REASON), CONTACT THE ABOVE WEB ADDRESS TO CONFIRM SHIPPING INSTRUCTIONS. PLEASE BOX BROKEN OR DAMAGED GEAR AND SHIP TO:
- ***N69255 Receiving Officer***  
***Attn: Ron Brown Tel:(619) 524-3882***  
***SPAWAR Systems Center Pacific (41420)***  
***4297 Pacific Highway, Building 7***  
***San Diego, CA. 92110***
- ONCE CONFIRMATION OF SHIPPING OF DAMAGED EQUIPMENT TAKES PLACE, REPLACEMENT GEAR WILL BE SENT TO YOU. ENSURE YOU PUT YOUR UNIT'S RUC OR DODAAC NUMBERS AND UNIT'S ADDRESS AND A POINT OF CONTACT WITH EMAIL AND PHONE NUMBER.



# QUESTIONS?

C4ISR - SPAWAR - AUSGAR

