

**Flashing Status Light**


**Switch OFF/ON**

**OFF**

**Green:** Jamming(📶)

**Red:** Jamming/ Low Battery (📶)


Battery Replacement Procedure




Insert Four New Alkaline AA Batteries

Pipper Information (V4.11)

**Right**




**Wrong**



**Right Positions**

**Wrong Positions**

**Pipper**

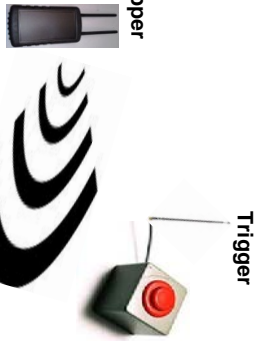


**Trigger**

**RCIED**

1. Ensure alkaline AA batteries are installed correctly.
2. Turn Pipper on and ensure green light is flashing.
3. If Red light is flashing replace all batteries
4. Turn off when not in use to save battery life
5. Wear on outside of uniform in the recommended Pipper positions.

2012AUG08



**Flashing Status Light**


**Switch OFF/ON**

**OFF**

**Green:** Jamming(📶)

**Red:** Jamming/ Low Battery (📶)


Battery Replacement Procedure




Insert Four New Alkaline AA Batteries

Pipper Information (V4.11)

**Right**




**Wrong**



**Right Positions**

**Wrong Positions**

**Pipper**



**Trigger**

**RCIED**

1. Ensure alkaline AA batteries are installed correctly.
2. Turn Pipper on and ensure green light is flashing.
3. If Red light is flashing replace all batteries
4. Turn off when not in use to save battery life
5. Wear on outside of uniform in the recommended Pipper positions.

2012AUG08