

Flashing Status Light

Switch
OFF/ON



OFF

Green: Jamming(📶)
Red: Jamming/
Low Battery (📶)

Battery Replacement Procedure




Insert Four New Alkaline AA Batteries

Pipper Information (V4.1.1)

Right



Wrong

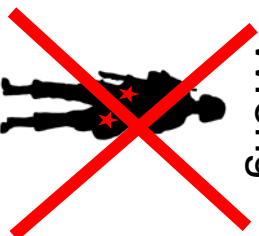

Right Positions

Wrong Positions

Trigger




Pipper



RCIED

1. Ensure alkaline AA batteries are installed correctly.
2. Turn Pipper on and ensure green light is flashing.
3. If Red light is flashing replace all batteries
4. Turn off when not in use to save battery life
5. Wear on outside of uniform in the recommended Pipper positions.

2012AUG08

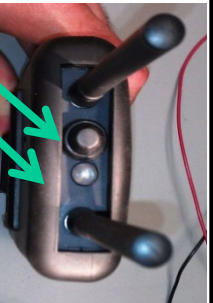

Flashing Status Light

Switch
OFF/ON



OFF

Green: Jamming(📶)
Red: Jamming/
Low Battery (📶)

Battery Replacement Procedure




Insert Four New Alkaline AA Batteries

Pipper Information (V4.1.1)

Right



Wrong

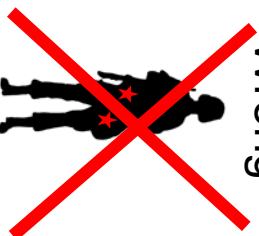

Right Positions

Wrong Positions

Trigger



Pipper



RCIED

1. Ensure alkaline AA batteries are installed correctly.
2. Turn Pipper on and ensure green light is flashing.
3. If Red light is flashing replace all batteries
4. Turn off when not in use to save battery life
5. Wear on outside of uniform in the recommended Pipper positions.

2012AUG08